


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET SUBURBAN/GMC YUKON/CADILLAC ESCALADE ESV

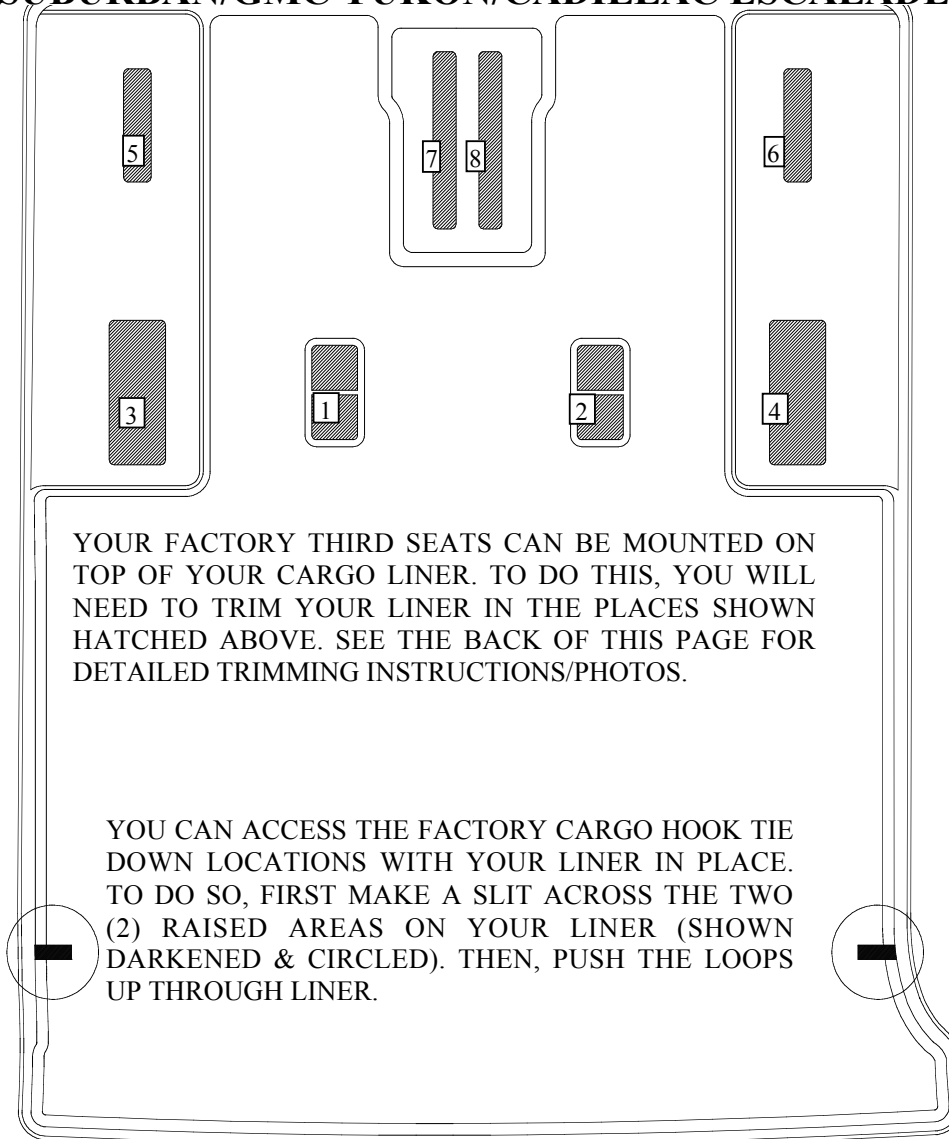

#2144 TRIMMING PHOTOS

A UTILITY KNIFE WORKS WELL FOR TRIMMING. USE CAUTION WHEN HANDLING SHARP OBJECTS.



LOCATIONS 1 & 2. TRIM LINER ALONG BOTH SIDES USING INSIDE EDGE OF BAND AS A GUIDE. SPLIT IN CENTER ALONG RAISED LINE. LEAVE "TONGUE" ATTACHED TO EACH END. TUCK TONGUE INTO RELIEF AREA.



LOCATIONS 3 & 4. TRIM LINER USING RAISED LINES AS GUIDE. REMOVE RECTANGULAR AREA COMPLETELY TO ALLOW ACCESS TO ATTACHMENT BAR.



LOCATIONS 5 & 6. TRIM LINER ALONG THREE SIDES USING RAISED LINE AS A GUIDE. DO NOT TRIM EDGE CLOSEST TO REAR OF VEHICLE, INSTEAD LEAVE "TONGUE" ATTACHED TO EACH END. TUCK TONGUE UNDER SEAT ATTACHMENT BARS. TONGUE WILL KEEP SEAT FROM CATCHING ON EDGE OF LINER WHEN REMOVED.



LOCATIONS 7 & 8. TRIM LINER ALONG THREE SIDES USING RAISED LINE AS A GUIDE. DO NOT TRIM EDGE CLOSEST TO REAR OF VEHICLE, INSTEAD LEAVE "TONGUE" ATTACHED TO EACH END. TUCK TONGUE UNDER SEAT ATTACHMENT BARS. TONGUE WILL KEEP SEAT FROM CATCHING ON EDGE OF LINER WHEN REMOVED.

WITH THE ABOVE TRIMMING COMPLETED, YOUR THIRD ROW SEATS CAN BE MOUNTED ON TOP OF YOUR CARGO LINER. TAKE CARE TO MAKE SURE THIRD ROW SEATS ARE SECURELY LOCKED/FASTENED INTO PLACE BEFORE OPERATING VEHICLE. IF YOU HAVE ANY INSTALLATION QUESTIONS, PLEASE CALL US AT 800-344-8759.

CARGO LINER PART #2144 IS DESIGNED TO COVER THE REAR 5 FOOT OF SUBURBAN'S/YUKON XL'S WITH AN ALLOWANCE FOR FACTORY THIRD ROW SEATS. IF YOU WANT A CARGO LINER TO FIT BEHIND THE THIRD ROW OF SEATS, YOU NEED HUSKY LINER PART #2143.