


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner inside will speed up the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR DODGE DURANGO

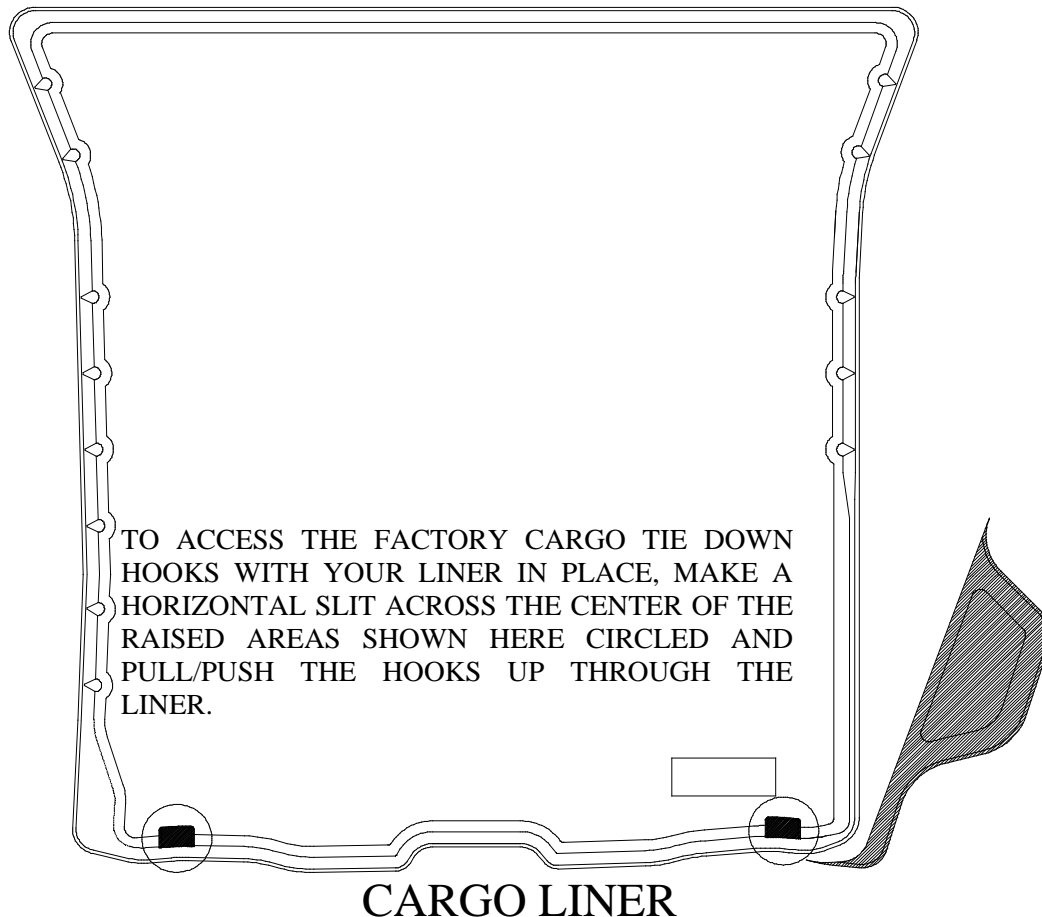

TRIMMING NOTE FOR 2001 AND NEWER DURANGO OWNERS. DUE TO THE ADDITION OF REAR HEATING COMPONENTS, YOU MAY NEED TO TRIM YOUR LINER FOR A PROPER FIT. FIRST, TEST FIT YOUR CARGO LINER IN YOUR DURANGO. IF INTERFERENCE DUE TO EXCESS MATERIAL OCCURS ALONG THE PASSENGER SIDE, TRIM YOUR LINER USING THE MOLDED-IN STEP AS A GUIDE, REMOVING THE SECTION SHOWN ABOVE SHADED. YOU CAN NOW COMPLETE YOUR INSTALLATION WITH A PROPER FIT (SEE PHOTOS ON BACK). A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

INSTALLATION PHOTOS OF HUSKY LINER PART #2178
SHOWN IN DODGE DURANGO'S

