

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner inside will speed up the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR DODGE DURANGO CARGO LINER

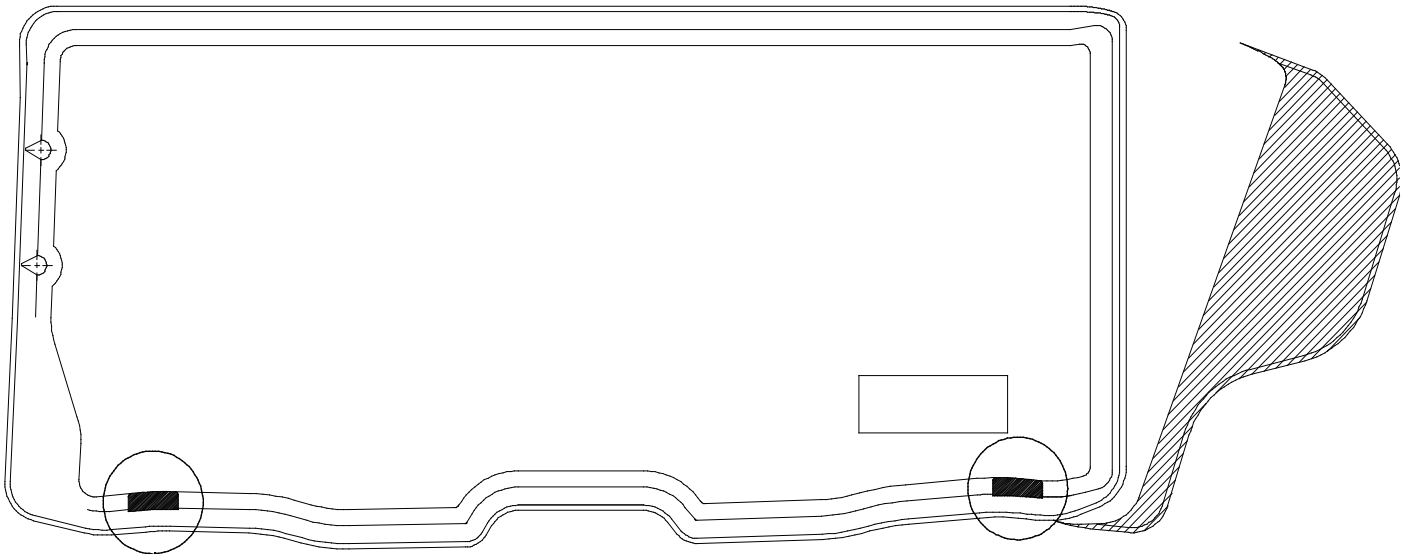

IF YOUR DURANGO IS A 2001 OR NEWER MODEL, YOUR HUSKY LINER WILL NEED TO BE TRIMMED BEFORE INSTALLATION. THIS IS EASILY DONE USING A UTILITY KNIFE OR HEAVY SCISSORS. JUST TRIM AS SHOWN ABOVE, USING THE EDGE OF THE RECESSED STEP AS A GUIDE (SEE PHOTOS ON BACK). YOUR LINER IS NOW READY FOR INSTALLATION. IF YOU WOULD LIKE TO ACCESS THE FACTORY CARGO TIE DOWN HOOKS WITH YOUR LINER IN PLACE, MAKE A HORIZONTAL SLIT ACROSS THE CENTER OF THE RAISED AREAS SHOWN HERE CIRCLED AND PULL THE HOOKS UP THROUGH THE LINER.

**PHOTO OF 2179 TRIMMED FOR USE IN A 2001 DURANGO**

