


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR S-SERIES CHEVROLET BLAZER/GMC JIMMY CARGO LINER

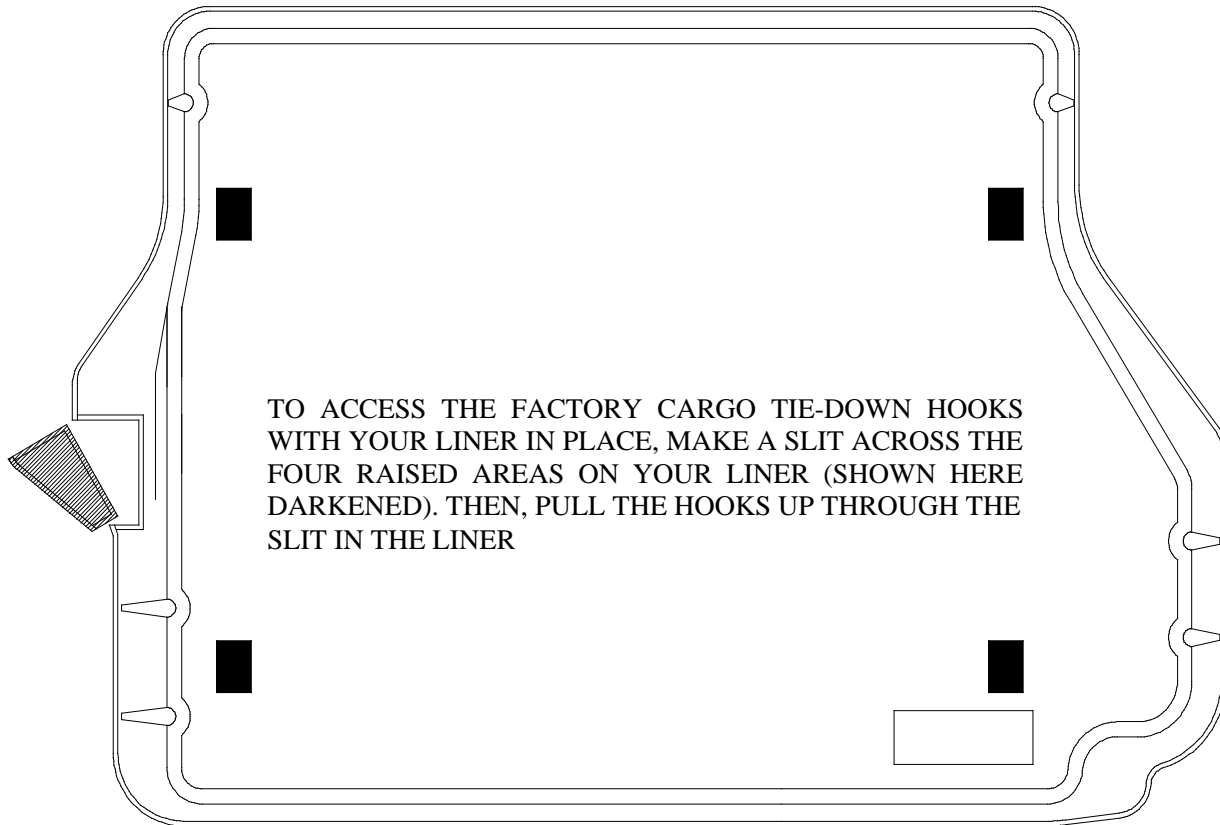

FOR VEHICLES EQUIPPED WITH AN INSIDE MOUNTED SPARE TIRE, IT WILL BE NECESSARY TO TRIM YOUR LINER BEFORE INSTALLATION. THIS IS EASILY ACCOMPLISHED WITH A UTILITY KNIFE OR HEAVY SCISSORS. TO TRIM, CUT DOWN THE WALL AND THROUGH THE CENTER OF THE RAISED BAND LOCATED ALONG THE LEFT EDGE OF THE LINER (SEE ABOVE). CONTINUE CUTTING THROUGH THE CENTER OF THE BAND UNTIL THE SECTION IS REMOVED. REMOVE THE SPARE TIRE. NOW THE LINER CAN BE INSTALLED. ONCE THE LINER IS IN PLACE, REPOSITION THE SPARE TIRE.