


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner inside will speed up the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD ESCAPE/MAZDA TRIBUTE CARGO LINER

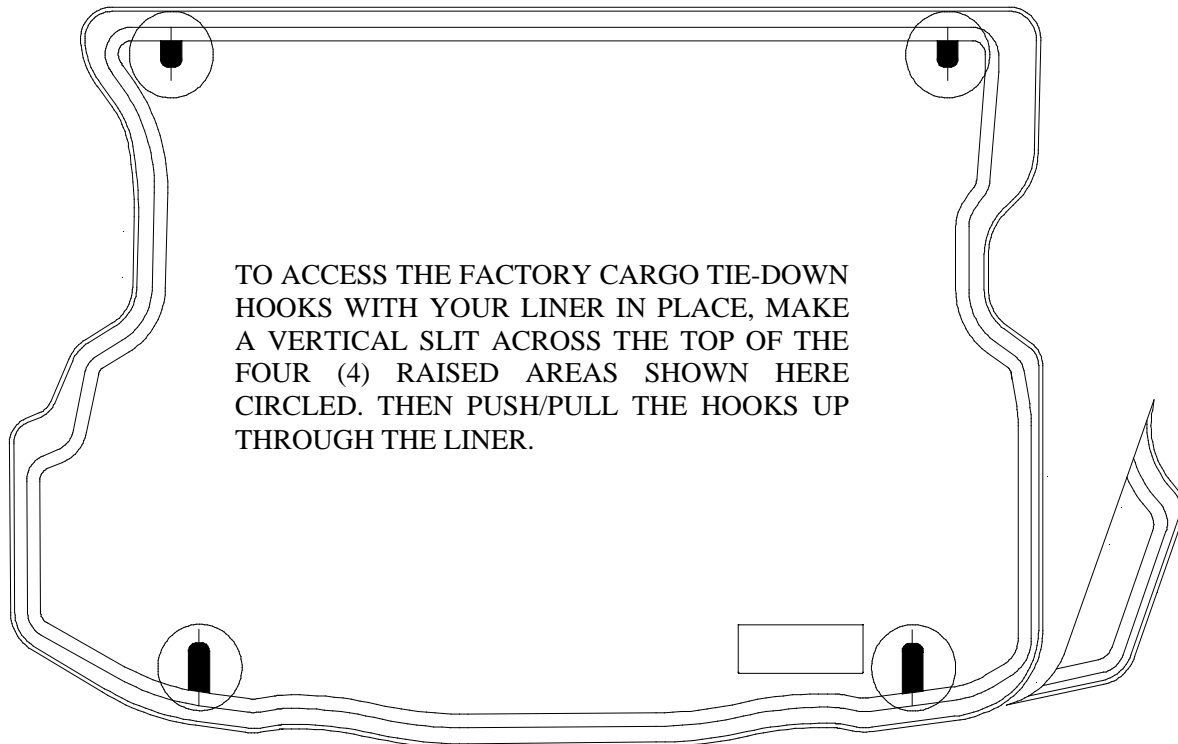

IF YOUR FORD ESCAPE/MAZDA TRIBUTE COMES EQUIPPED WITH THE FACTORY SIX DISC IN-DASH CD PLAYER, IT HAS A SUBWOOFER MOUNTED IN THE LOWER LEFT HAND SIDE OF THE CARGO AREA. YOUR CARGO LINER CAN EASILY BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, CUT ALONG THE OUTER EDGE OF THE MOLDED STEP AND ALONG THE EDGE OF THE TREAD ON THE RAISED PORTION OF THE LINER. THIS WILL LEAVE A “LIP” ALONG THE TRIMMED EDGE (SEE ABOVE). PHOTOS OF THE TRIMMED PART ARE INCLUDED ON THE BACK OF THIS INSTRUCTION SHEET.

PHOTOS OF 2315 TRIMMED FOR REAR SUBWOOFER



YOU CAN EASILY ACCESS THE FACTORY POWER POINT LOCATED IN THE CARGO AREA WITH YOUR LINER INSTALLED. USING A UTILITY KNIFE OR HEAVY SHEARS, SIMPLY TRIM THE MATERIAL FROM THE RECESSED "U-SHAPED" AREA LOCATED DIRECTLY IN FRONT OF THE POWER POINT.

