

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner inside will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC HD 2500/3500 SERIES CREW CAB SECOND SEAT CARGO LINER

REAR OF VEHICLE

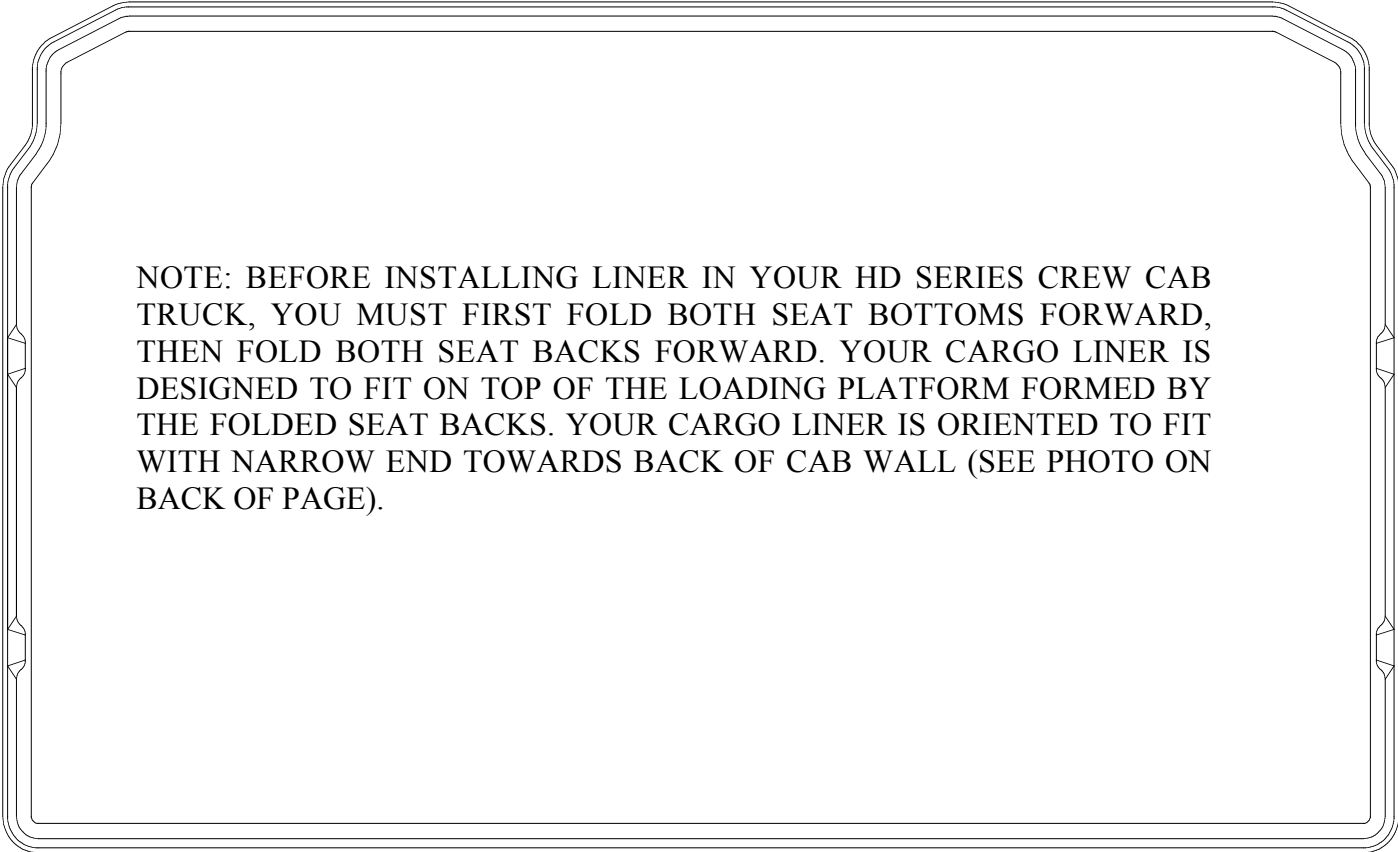

NOTE: BEFORE INSTALLING LINER IN YOUR HD SERIES CREW CAB TRUCK, YOU MUST FIRST FOLD BOTH SEAT BOTTOMS FORWARD, THEN FOLD BOTH SEAT BACKS FORWARD. YOUR CARGO LINER IS DESIGNED TO FIT ON TOP OF THE LOADING PLATFORM FORMED BY THE FOLDED SEAT BACKS. YOUR CARGO LINER IS ORIENTED TO FIT WITH NARROW END TOWARDS BACK OF CAB WALL (SEE PHOTO ON BACK OF PAGE).

