

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR JEEP CHEROKEE FRONT FLOOR LINERS

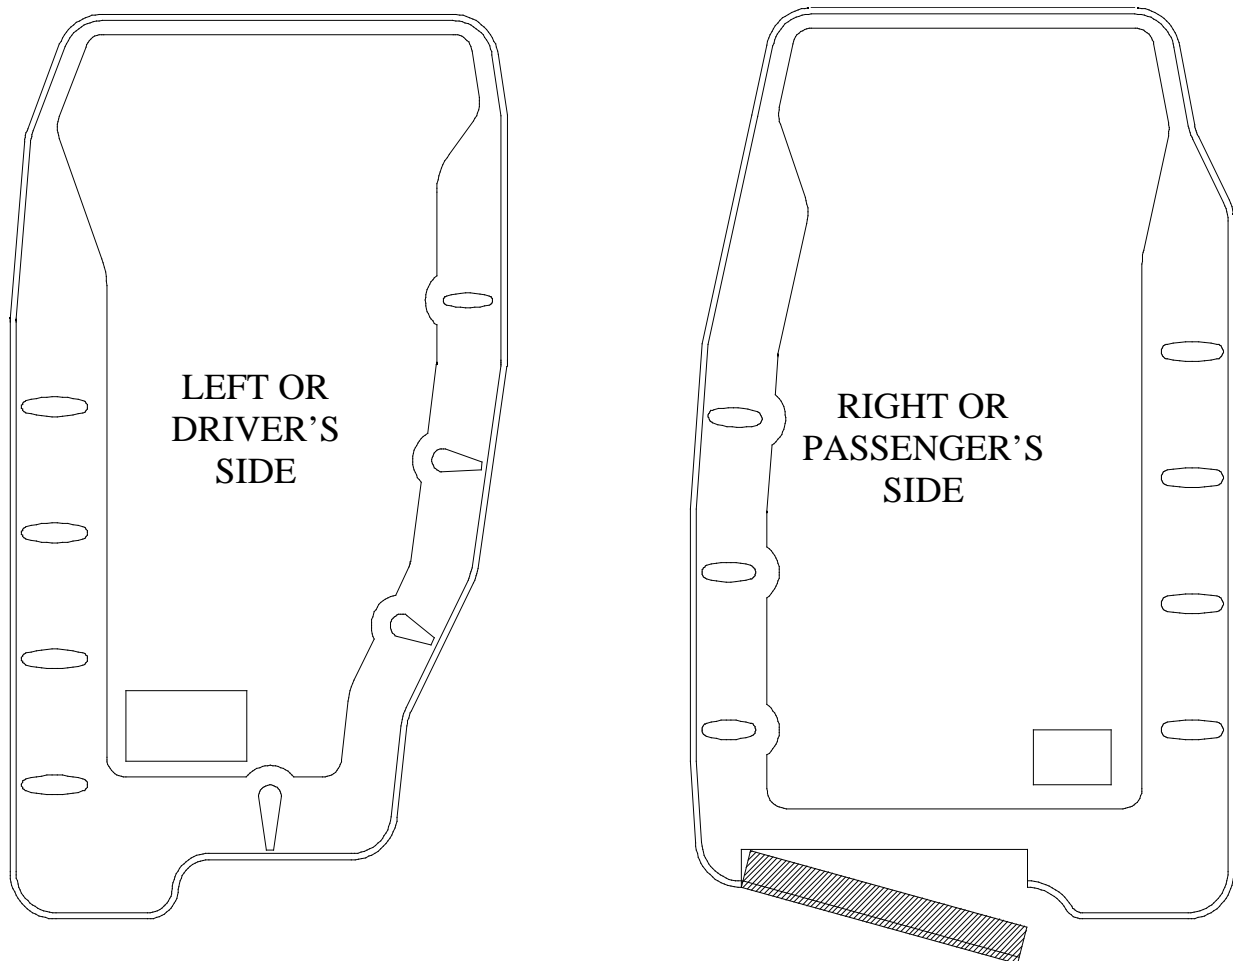

IF YOUR PASSENGER SIDE LINER INTERFERES WITH POWER SEAT TRAVEL FORWARD AND BACK, YOU MAY NEED TO TRIM YOUR LINERS AS SHOWN ABOVE. TO TRIM, REMOVE THE RECESSED PORTION OF THE BACK WALL. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL