

### 99-02 JEEP GRAND CHEROKEE LIMITED FRONT MUD GUARD INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

#### Tools Required:


- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver

#### Package Contents

- Driver (LH) & passenger (RH) side mud guards
- #10 screw (qty. 4)
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing factory fastener from location A (Figure 1).
3. Attach mud guard at location A with factory fastener. Check fit and level before tightening.
4. Using mud guard as a template, center punch, and drill 1/8" holes at locations B & C and fasten with #10 screws.

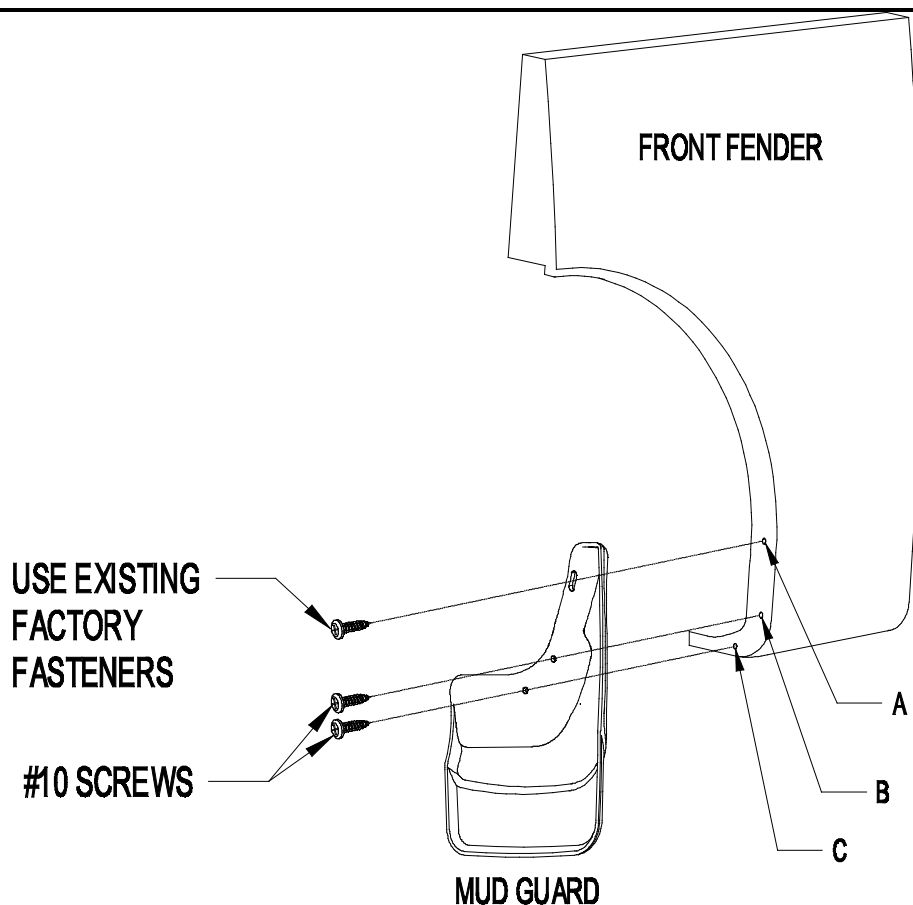

**Figure 1**

#### **PAINTING INSTRUCTIONS**

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer