

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC EXTENDED CAB TRUCK SECOND SEAT FLOOR LINER (VEHICLES WITH OPTIONAL REAR UNDER SEAT STORAGE BOX)

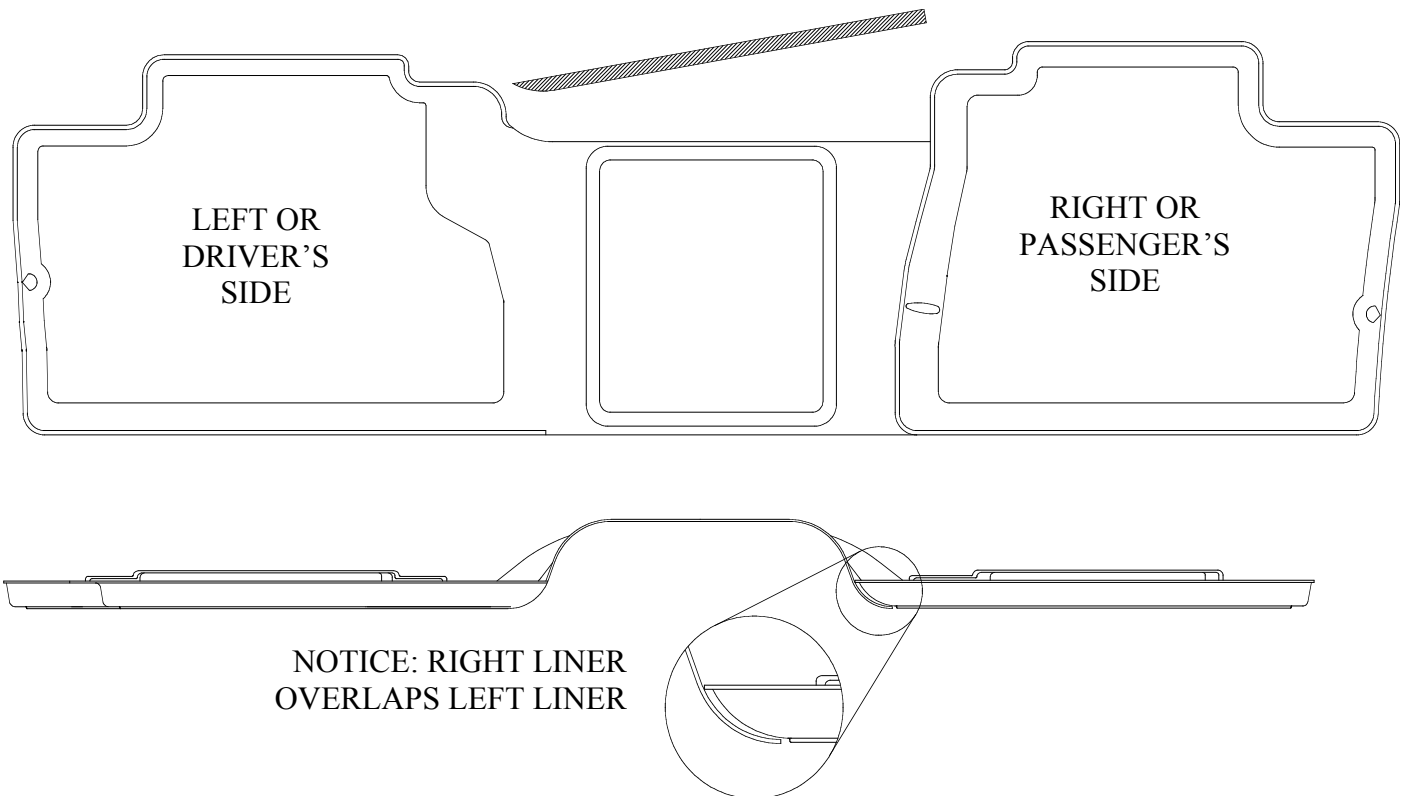

NOTE: THIS LINER (PART #6132) FITS SILVERADO/SIERRA EXTENDED CAB TRUCKS EQUIPPED WITH THE OPTIONAL FACTORY STORAGE BOX LOCATED UNDER THE REAR SEATS. IF YOU DO NOT HAVE THE STORAGE BOX AND WOULD LIKE A LINER THAT COVERS TO THE BACK WALL OF THE CAB, YOU NEED PART #6136.

SOME SILVERADO/SIERRA OWNERS WILL NEED TO TRIM THEIR DRIVER'S SIDE LINER AS SHOWN ABOVE (TOP) TO ALLOW FOR AN OPTIONAL LONGER CENTER CONSOLE (BETWEEN THE TWO FRONT BUCKET SEATS). TRIM AWAY THE LOWERED AREA (WHERE THE LINER MEETS THE CONSOLE) USING THE OFFSET STEP IN THE LINER AS A GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING