



THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC EXTENDED CAB TRUCK SECOND SEAT FLOOR LINER

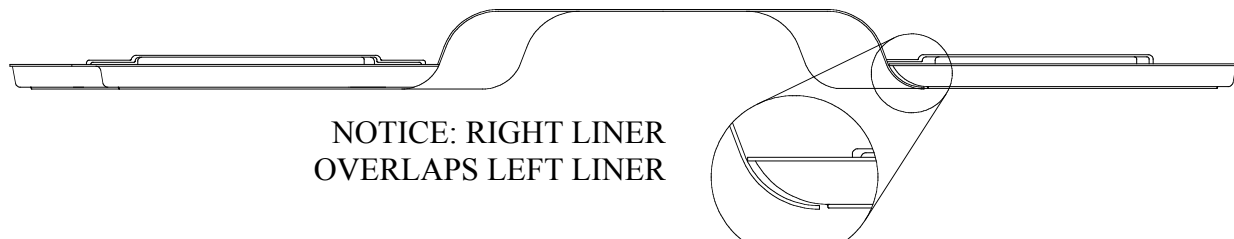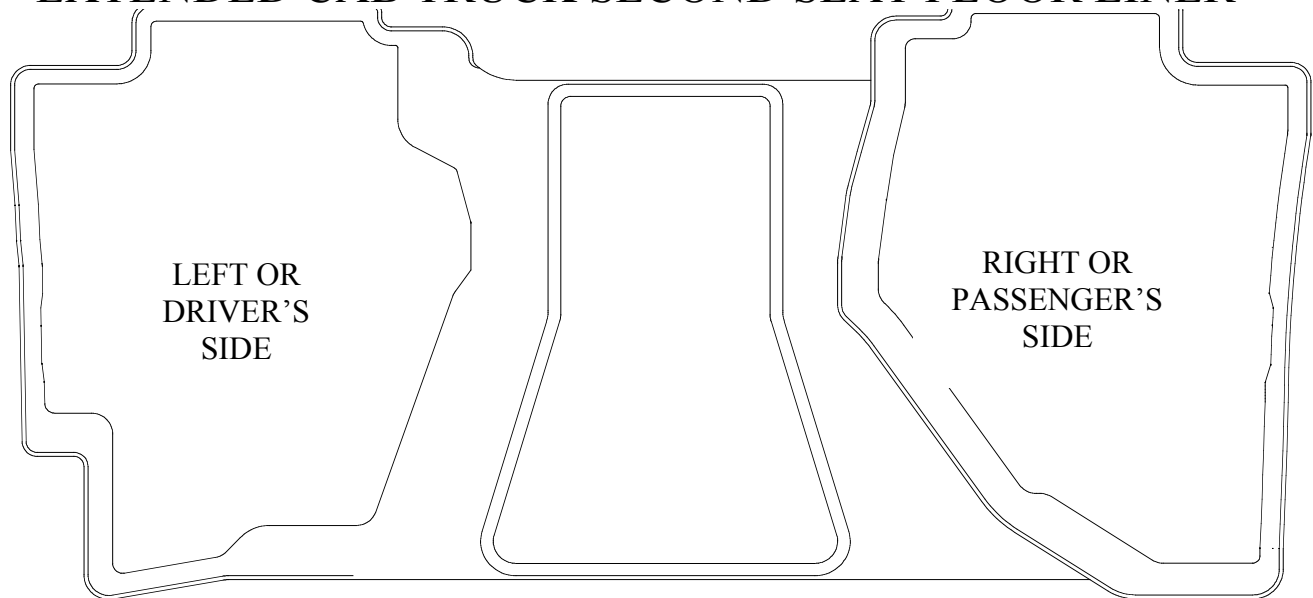

NOTICE: RIGHT LINER
OVERLAPS LEFT LINER

NOTE: THIS LINER FITS ONLY THE SHORT BED VERSION OF THE SILVERADO/SIERRA 1500 SERIES EXTENDED CAB TRUCK THAT WAS INTRODUCED IN THE 2006 MODEL YEAR. IF YOU HAVE THE REGULAR OR LONG BED VERSION OF THIS TRUCK, YOU NEED PART #6136 FOR APPLICATIONS WITHOUT THE UNDERSEAT TOOL BOX AND #6132 FOR APPLICATIONS WITH THE UNDERSEAT TOOL BOX.