



THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-150 AND F-250 LT. DUTY TRUCK SECOND SEAT FLOOR LINER

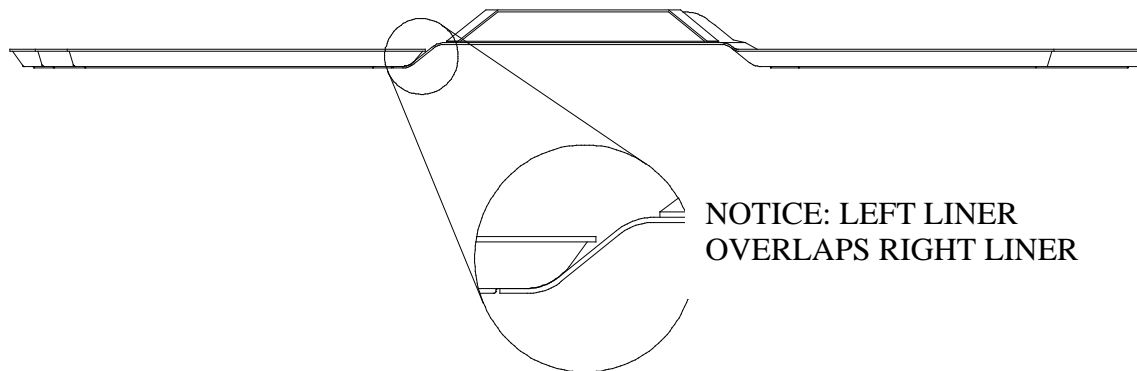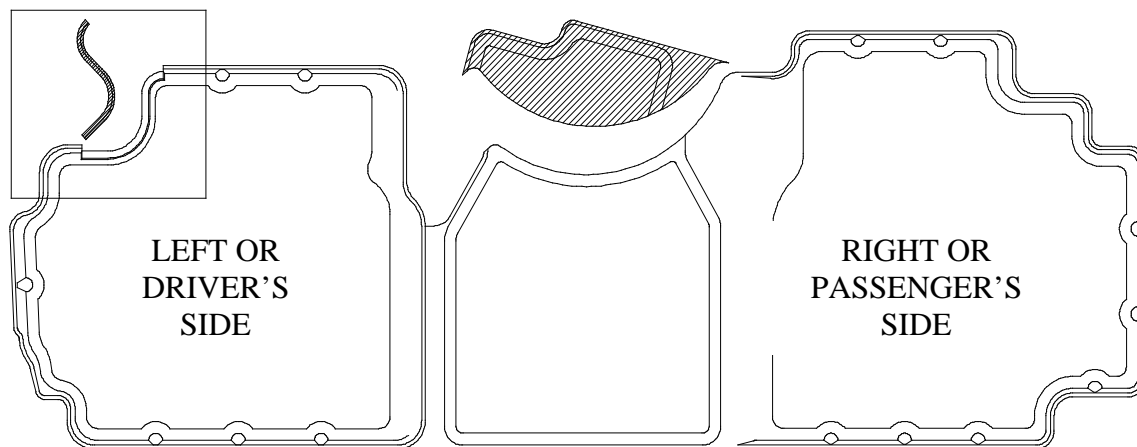

ON VEHICLES EQUIPPED WITH A CENTER CONSOLE IT WILL BE NECESSARY TO TRIM AWAY A PORTION OF THE LINER AS SHOWN. TRIM ALONG THE SRIBED LINE. A TRIM AREA IS PROVIDED FOR POWER SEAT EQUIPPED VEHICLES THAT HAVE INTERFERENCE WITH THE SEAT TRACK (SEE ABOVE). A UTILITY KNIFE OR SCISSORS WORK WELL FOR TRIMMING.