

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA HIGHLANDER SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

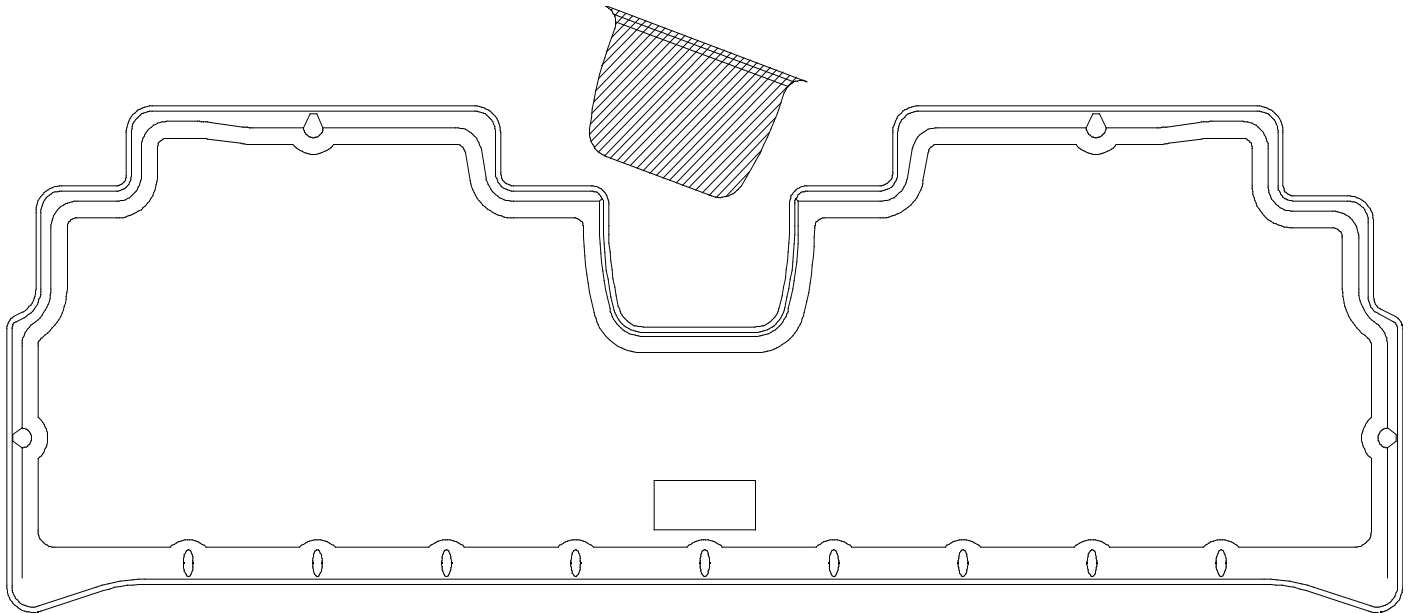


IF YOUR HIGHLANDER IS EQUIPPED WITH A FACTORY CONSOLE, YOUR LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS OPTION. THIS TRIMMING IS EASILY DONE USING A UTILITY KNIFE OR HEAVY SHEARS. JUST TRIM AS SHOWN IN THE SKETCH ABOVE LEAVING THE ” FLAT BAND AS THE EDGE OF THE TRIMMED PART. YOU WILL TRIM AWAY THE TREADED MATERIAL INSIDE OF THIS BAND. PHOTOS OF THE TRIMMING PROCESS AND OF THE TRIMMED PART ARE INCLUDED ON THE BACK OF THIS PAGE.

PHOTOS OF HUSKY LINER #6585 SHOWING TRIMMING FOR FACTORY CONSOLE



PART #6585 UNTRIMMED

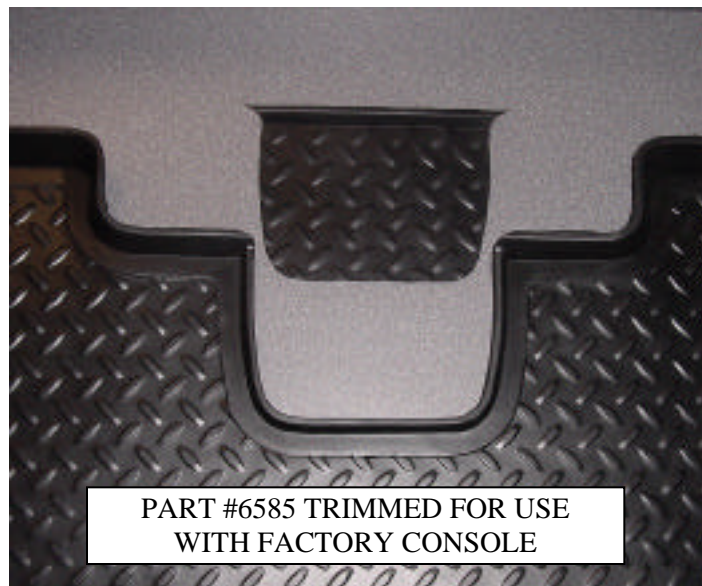

PART #6585 TRIMMED FOR USE WITH FACTORY CONSOLE



PART #6585 SHOWN TRIMMED INSTALLED IN A HIGHLANDER WITH FACTORY CONSOLE