

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA HIGHLANDER SECOND SEAT FLOOR LINER

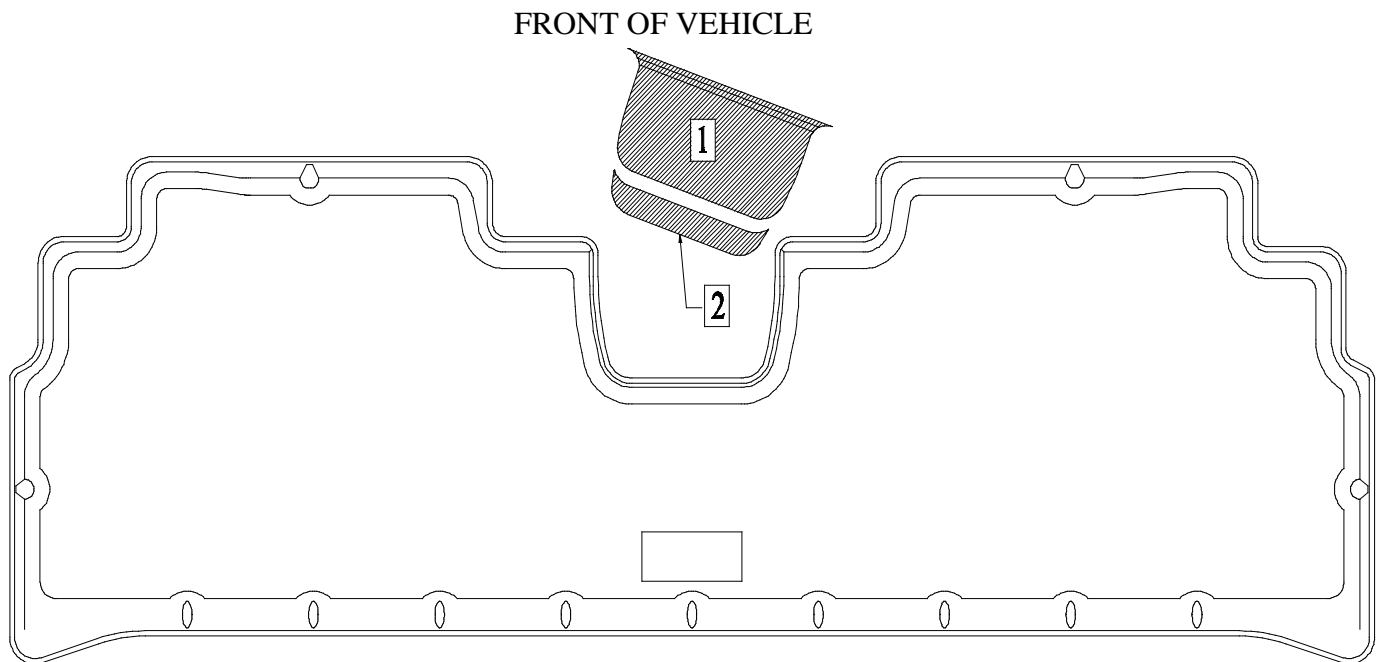

IF YOUR HIGHLANDER IS EQUIPPED WITH A FACTORY CONSOLE, YOUR SECOND SEAT LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS OPTION. THIS TRIMMING IS EASILY DONE USING A UTILITY KNIFE OR HEAVY SHEARS. FOR 2002 MODELS, TRIM AWAY AREA ONE (1) BY FOLLOWING THE MOLDED IN GROOVE (SEE PHOTO 1 ON THE BACK OF THIS PAGE). FOR 2001 MODELS, TRIM AWAY BOTH AREAS ONE (1) AND TWO (2) AS SHOWN IN THE SKETCH ABOVE (SEE PHOTO 2 ON THE BACK SIDE OF THIS PAGE). YOU WILL NEED TO TRIM AWAY THE AREA INSIDE OF THE GROOVE AND ALSO THE TREADED MATERIAL INSIDE OF THE FLAT BAND.

## PHOTOS OF HUSKY LINER #6586 SHOWING TRIMMING NECESSARY FOR FACTORY CONSOLE

PHOTO 1. PART #6586 TRIMMED TO FIT A 2002 TOYOTA HIGHLANDER.



NOTE THAT AREA ONE IS TRIMMED AWAY USING THE MOLDED  
IN GROOVE AS A GUIDE.

PHOTO 2. PART #6586 TRIMMED TO FIT A 2001 TOYOTA HIGHLANDER.



BOTH AREAS ONE AND TWO ARE TRIMMED. USE THE MOLDED  
GROOVE TO TRIM AREA ONE AND THEN TRIM THE TREADPLATED  
MATERIAL INSIDE OF FLAT EDGE TO REMOVE AREA TWO.