

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409<sup>®</sup> or Glass Plus<sup>®</sup> work well. Use of Armor All<sup>®</sup>, Son-of-a-Gun<sup>®</sup> or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT FORD EXPLORER/MERCURY MOUNTAINEER FLOOR LINER

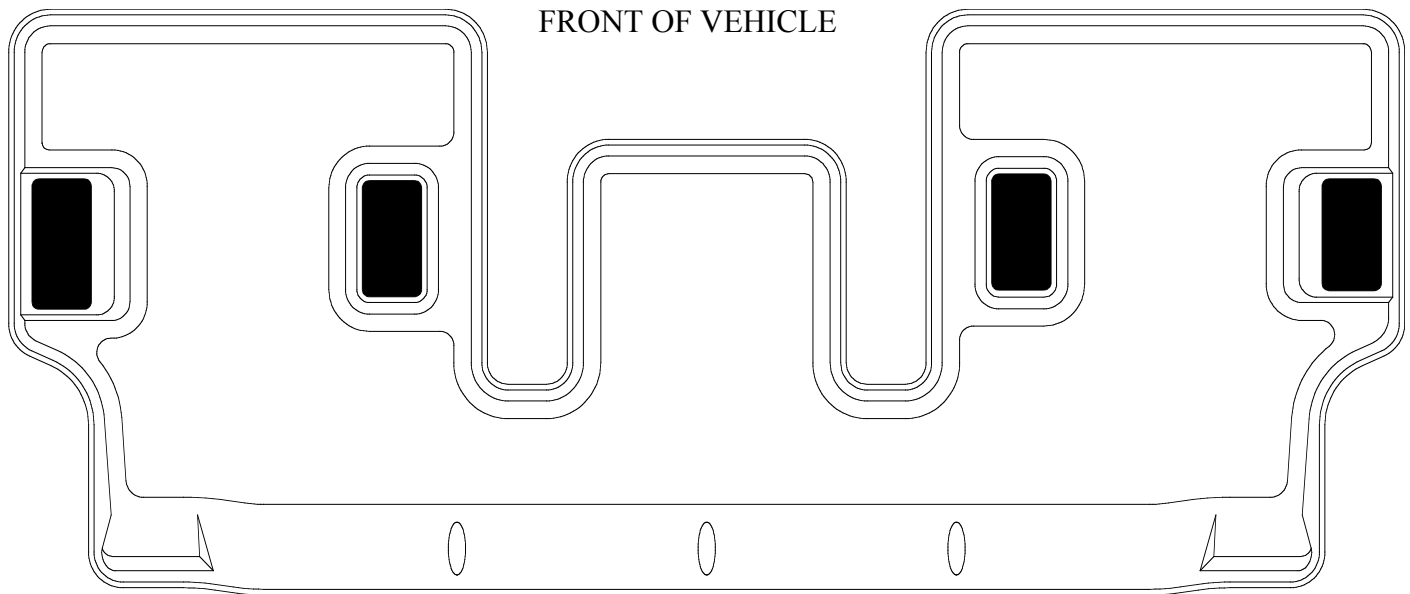

TO INSTALL YOUR LINER JUST RELEASE AND FOLD FORWARD YOUR SECOND ROW OUTER SEATS (THE CENTER SEAT DOES NOT FOLD FORWARD). ONCE THESE SEATS ARE BOTH FOLDED FORWARD, YOU CAN INSTALL YOUR LINER. THE SECOND ROW SEATS WILL REATTACH THROUGH THE FOUR (4) HOLES IN THE LINER.

**NOTICE:** THE FOUR (4) AREAS DARKENED ABOVE SHOULD BE TRIMMED OUT WHEN YOU RECEIVE YOUR LINER. IF THESE ARE NOT TRIMMED, YOUR SEATS WILL NOT BE ABLE TO LOCK INTO PLACE AND THE LINER SHOULD NOT BE INSTALLED. IF YOUR LINER IS NOT TRIMMED IN THESE FOUR AREAS, PLEASE CALL US AT 800-344-8759.