

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT FORD EXPLORER/MERCURY MOUNTAINEER FLOOR LINER (WITH 2<sup>ND</sup> ROW BENCH SEATS)

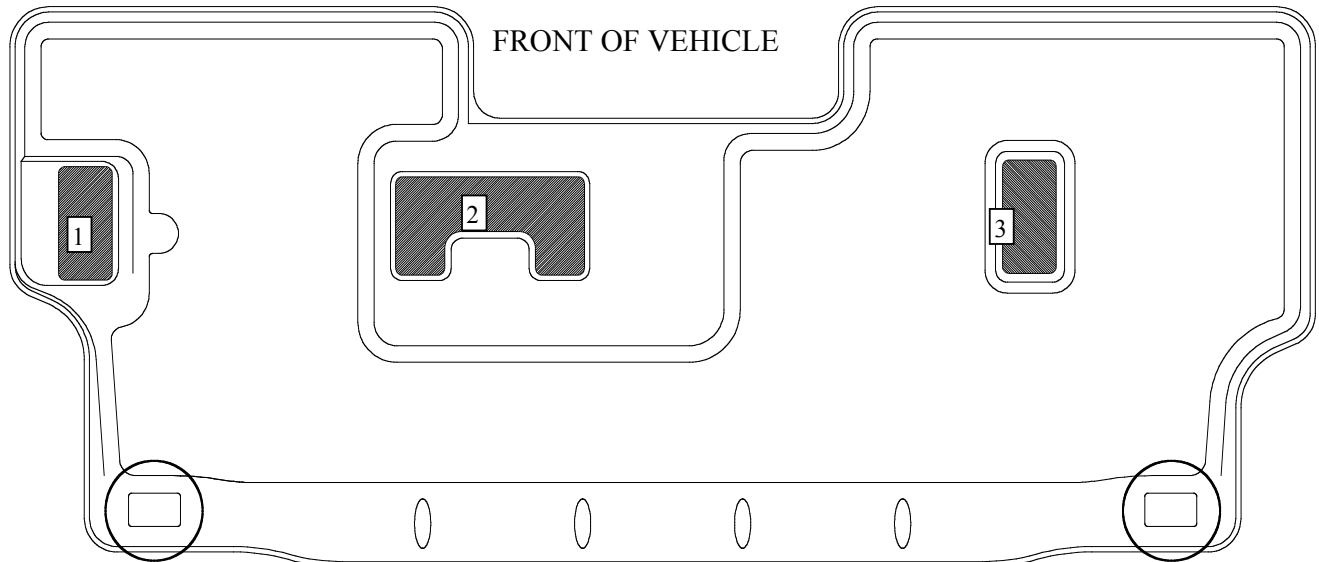

TO INSTALL YOUR LINER, SIMPLY RELEASE AND FLIP/FOLD FORWARD BOTH OF YOUR SECOND ROW BENCH SEATS. THEN, LOCATE THE TWO CHILD SAFETY HOOKS LOCATED ALONG THE BACK WALL OF THE 3<sup>RD</sup> SEAT'S MOUNTING PLATFORM AND MAKE SURE THEY ARE FIRMLY TUCKED AGAINST THE MOUNTING PLATFORM. WITH THESE STEPS COMPLETED, YOU CAN EASILY POSITION YOUR LINER INTO PLACE.

NOTE THAT THE SECOND ROW SEATS WILL REATTACH THROUGH THE THREE (3) PRE-TRIMMED HOLES IN THE LINER. IF THE THREE (3) AREAS DARKENED/NUMBERED ABOVE ARE NOT TRIMMED OUT WHEN YOU RECEIVE YOUR LINER, **DO NOT INSTALL YOUR LINER**. INSTEAD, PLEASE CALL US AT 800-344-8759

TO ACCESS THE CHILD SAFETY SEAT HOOKS WITH YOUR LINER IN PLACE, SIMPLY TRIM THE MATERIAL AWAY FROM THE TWO (2) LOWERED AREAS LOCATED ALONG THE BACK WALL OF THE LINERS (SHOWN CIRCLED ABOVE—SEE PHOTO ON BACK OF THIS PAGE).

