


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR THIRD SEAT FORD EXPLORER/MERCURY MOUNTAINER FLOOR LINER (WITH SECOND ROW BUCKET SEATS)

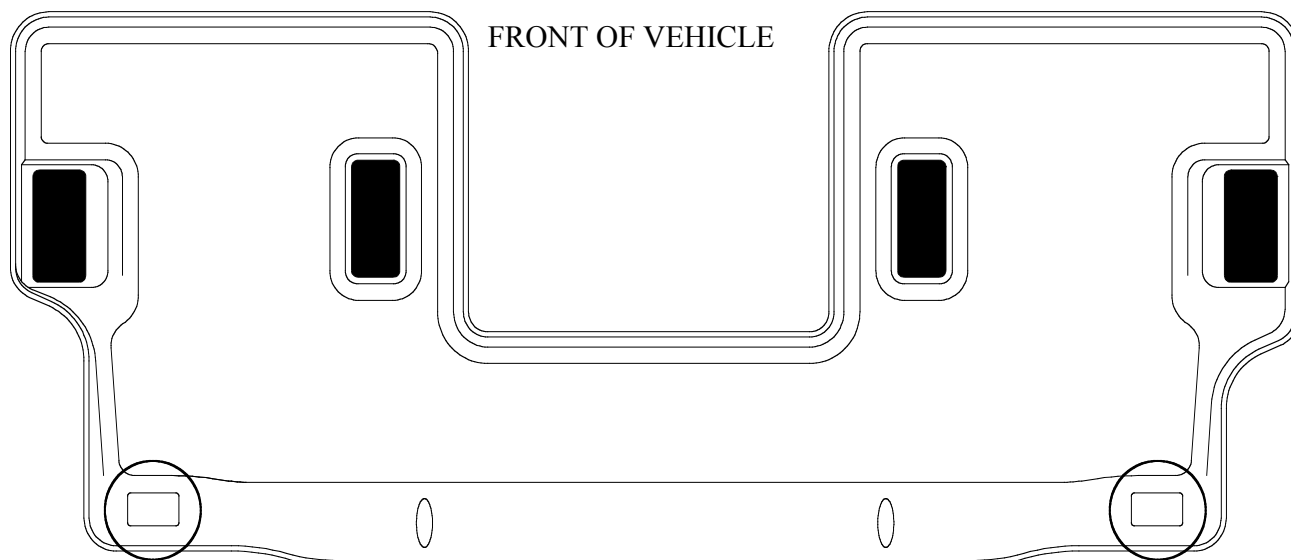

TO INSTALL YOUR LINER, JUST RELEASE AND FOLD FORWARD BOTH SECOND ROW BUCKET SEATS (IF YOU DO NOT HAVE BUCKET SEATING, YOU WILL NEED HUSKY LINER PART #7377 FOR YOUR VEHICLE). ONCE BOTH SEATS ARE FOLDED FORWARD, YOU CAN INSTALL YOUR LINER. THE SECOND ROW SEATS WILL REATTACH THROUGH THE FOUR (4) HOLES IN THE LINER (SHOWN ABOVE DARKENED).

NOTICE: IF THE FOUR (4) AREAS SHOWN DARKENED ABOVE ARE NOT TRIMMED OUT WHEN YOU RECEIVE YOUR LINER, YOUR SEATS WILL NOT BE ABLE TO LOCK INTO PLACE AND THE LINER SHOULD NOT BE INSTALLED. IF YOUR LINER IS NOT TRIMMED IN THESE FOUR AREAS, PLEASE CALL US AT 800-344-8759.

TO ACCESS THE CHILD SAFETY SEAT HOOKS WITH YOUR LINER IN PLACE, SIMPLY TRIM THE MATERIAL AWAY FROM THE TWO (2) LOWERED AREAS LOCATED ALONG THE BACK WALL OF THE LINERS (SHOWN CIRCLED ABOVE—SEE PHOTO ON BACK OF THIS PAGE).

