


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.


INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE, GMC ACADIA, CHEVROLET TRAVERSE & SATURN OUTLOOK FRONT LINERS

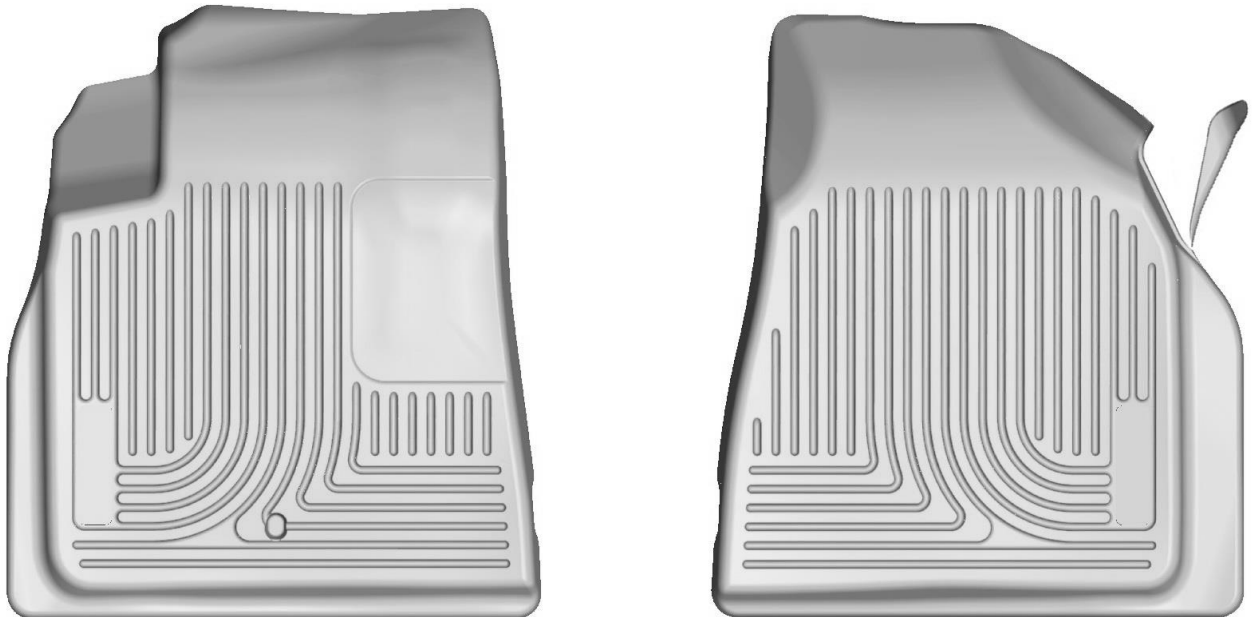

DEPENDING ON THE FACTORY OPTIONS INSTALLED ON YOUR VEHICLE, YOUR PASSENGER'S SIDE LINER MAY REQUIRE TRIMMING. TO DETERMINE IF TRIMMING MIGHT BE NEEDED, INSTALL THE PASSENGER SIDE LINER AND OBSERVE THE PORTION OF THE LINER THAT MATCHES UP TO THE UPPER RIGHT HAND KICK PANEL. IF THE LINER APPEARS TOO WIDE AND DOES NOT LIE FLAT, YOU WILL NEED TO TRIM YOUR LINER. IF THE LINER CONTOURS THE AREA CORRECTLY, NO TRIMMING IS NEEDED.

TO TRIM, LOCATE THE STEP MOLDED INTO YOUR LINER ALONG THE RIGHT HAND EDGE (SEE IMAGE ABOVE). USE THE STEP AS A TRIMMING GUIDE AND REMOVE THE UNNEEDED MATERIAL. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING. PLEASE REVIEW THE TRIMMING PHOTOS ON THE BACK OF THIS PAGE.

PASSENGER SIDE LINER SHOWN UNTRIMMED. DOTTED LINE INDICATES TRIM FOR LARGER KICK PANEL

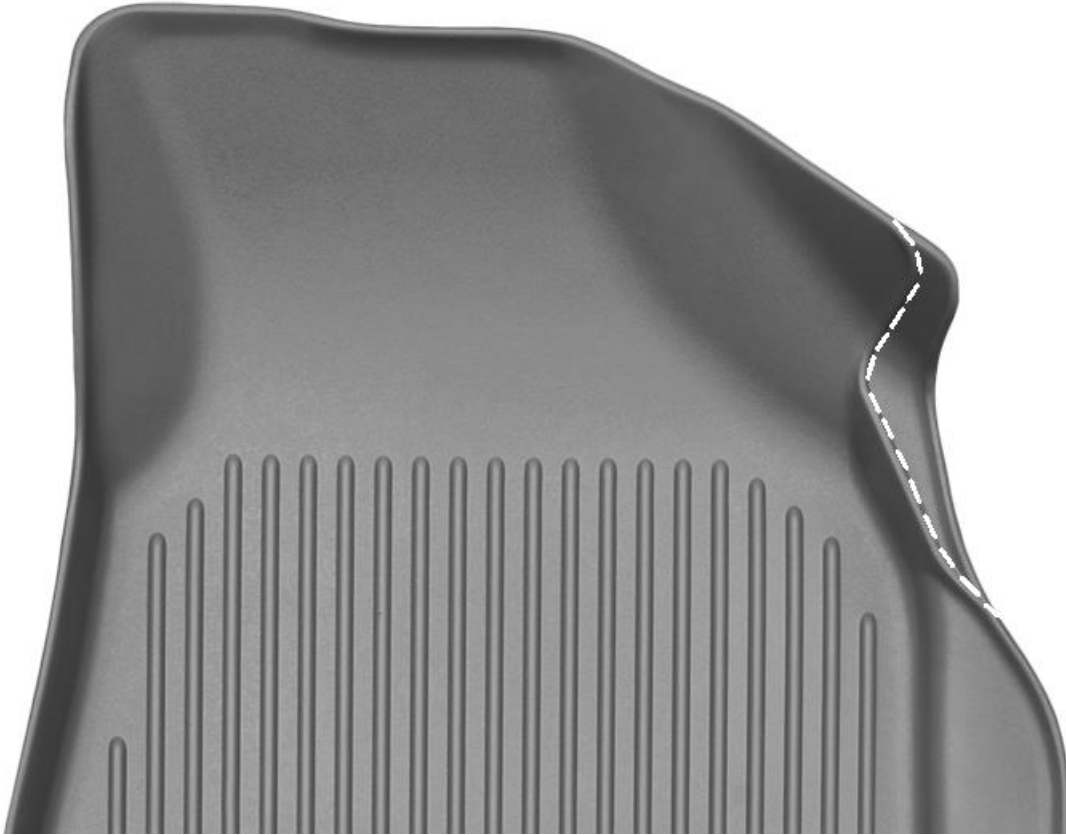

PASSENGER SIDE LINER SHOWN TRIMMED FOR LARGER KICK

