


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FULL SIZE CHEVROLET/GMC REGULAR CAB TRUCK

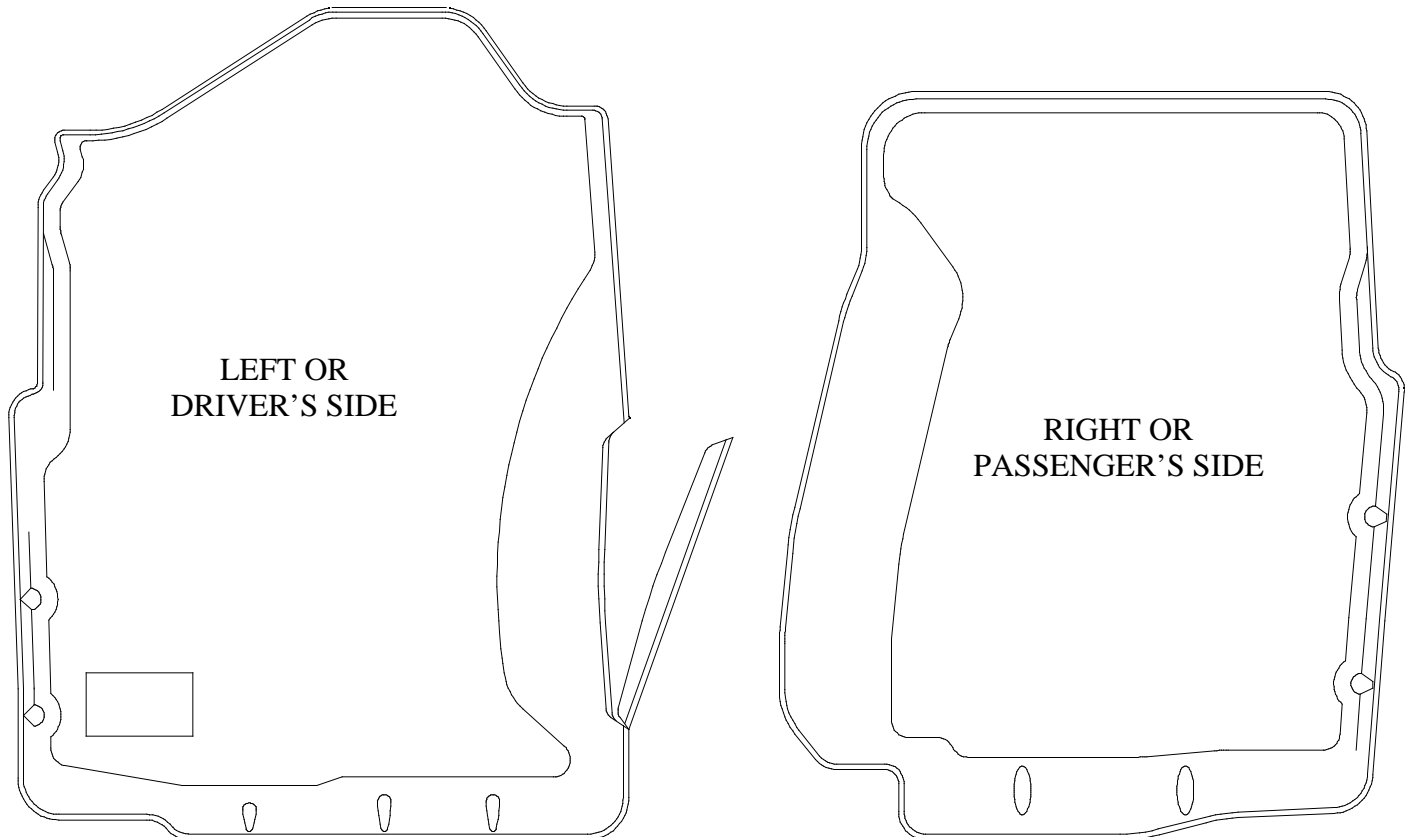

IF YOUR VEHICLE IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TRIM DOWN THE EDGES FORMED BY THE RECESSED AREA ALONG THE WALL AND ACROSS THE SCRIBED LINE. YOUR LINER WILL NOW FIT AROUND THE TRANSFER CASE SHIFTER HOUSING. A UTILITY KNIFE OR HEAVY SCISSORS WORKS WELL FOR TRIMMING YOUR LINER.