




Installation Instructions


www.huskyliners.com



IMPORTANT NOTICE



Husky® Custom Sun Shades do not cover the entire glass area on some vehicles. Windshield pillar post size and angle, rearview mirror shape and size, and additional sensors can prevent some Sun Shades from providing total black-out coverage.



STEP 1

Unfold your Husky® Custom Sun Shade with the reflective side facing outward and place it as flat as possible onto the dash area. If there are assist handles on the windshield pillars, make sure the Sun Shade fits in front of them. Then slide it forward until it reaches the bottom of the windshield ahead of the defroster vents.



STEP 2


With both hands, lift the top of the Husky® Custom Sun Shade into the windshield area.

NOTE: Be careful to not bend the corners while installing, as damage to the inner insulator may occur.



STEP 3

Pull down each sun visor to hold the Husky® Custom Sun Shade in place. In some cases, the Sun Shade may not reach all the way to the windshield pillars. This additional space is necessary to be able to install the Sun Shade without damaging it.

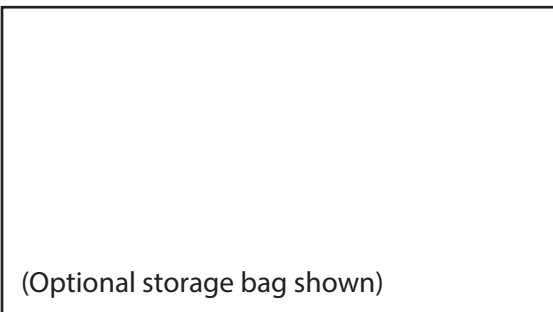

(Optional storage bag shown)

REMOVAL

Simply reverse the installation steps, fold the unit and store in the trunk or under a seat.

Form # 1320460 (09/18)